


10x10ft Pop Up Canopies

Product Parts


- 1- Frame
- 2- Wheel Carry Bag
- 3- Canopy
- 4- Stake Kit

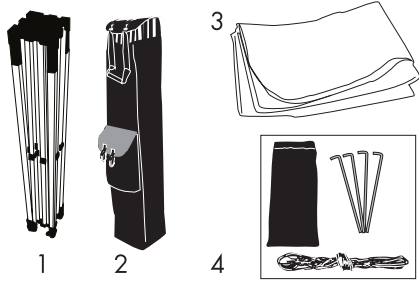

NOTE:

Premium Tent Frames have same set up instructions.

However, unlocking the height adjustment depends on the frame. See below:

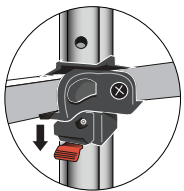


Premium Frames have 2" hexagon legs and plastic coated metal lever height adjustment

Step 1


Remove the Frame (1) from the Wheel Carry Bag (2) and place it at your desired location.

In tandem with another person, separate the legs of the Frame (1) until they are extended a full arms length.

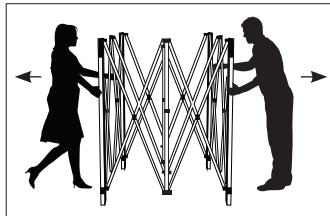


Step 2

Unfold your Canopy (3) and drape over the Frame (1). Position the apex of the Canopy (3) with the center pole of the Frame (1).

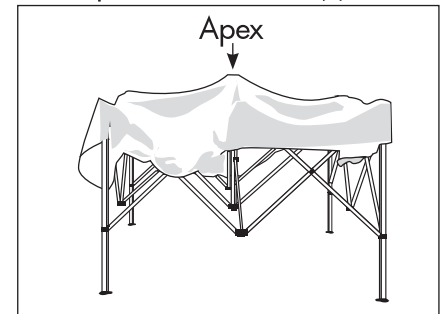


Step 3

Attach the Canopy (3) by connecting the loop strips on the Canopy (3) corners with the hook strips on the four legs of the Frame (1).

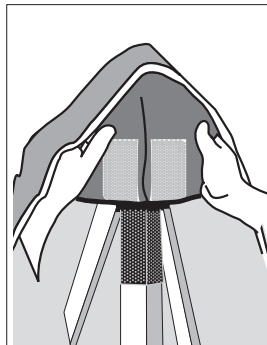

Step 4

Stand diagonal to each other, lift and separate the legs of the Frame (1). The Frame (1) will open a little at a time so alternate ends until the Frame (1) no longer expands.


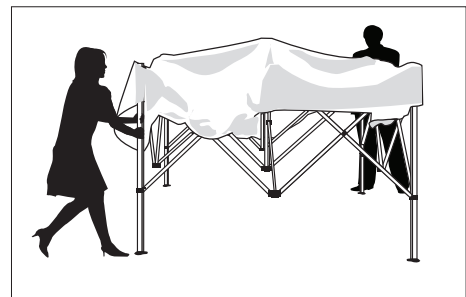


DO NOT DRAG FRAME-THIS COULD BEND THE LEGS

Set-Up Continued...

Step 5

Unlock the Height Adjustment connectors (lever or button) on Frame (1) legs. With connector in unlock position, lift the framework upwards until the four sliding connectors lock into place on the legs of the Frame (1).

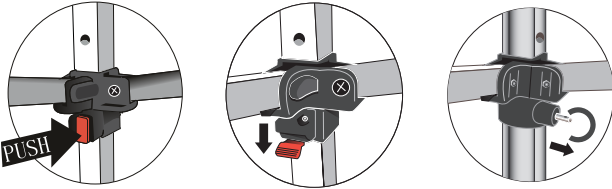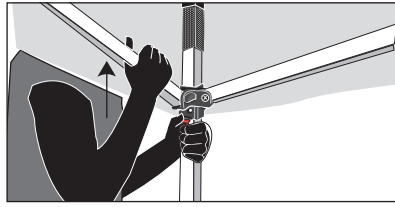


Push down lever,
Push in button OR Pull Pin
(method depends on the frame)

Step 7

Lift the apex of the Canopy (3) into place by turning the crank clockwise until the Canopy (3) is taut.

*Ultimate Frame does not have the crank.

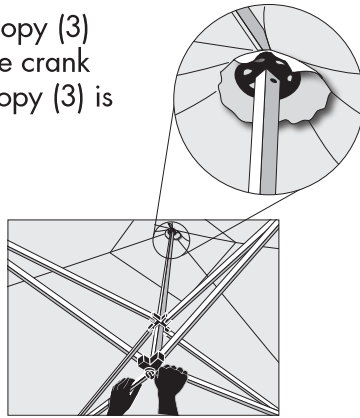

Step 6

Place your foot on the base of the tent leg as you release and extend the telescoping legs. Raise the tent to your desired height and lock the legs into place.



Place your foot on the base as you lift



NOTE:

To move an assembled frame, make sure a person is located at each leg. Lift and transport carefully in unison.



Secure with Stakes

Secure by looping rope through the "D" ring located on each corner of the canopy.

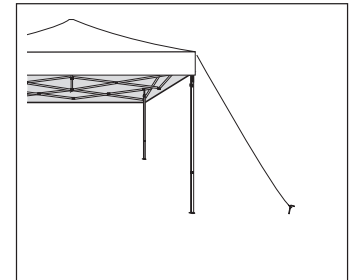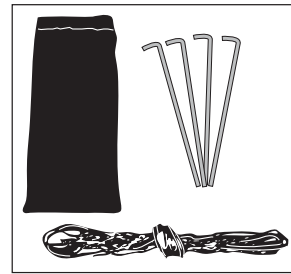

***FRAME MUST BE SECURED DOWN TO PREVENT WIND FROM LIFTING TENT AND CAUSING DAMAGE. NOT SECURING TENT PROPERLY VOIDS THE WARRANTY.**

Storage

Remove Canopy (3) from Frame (1) and collapse. Store collapsed Frame (1) in soft case (provided) as well as folded Canopy (3) in front pocket.

Store in a cool dry location.
To clean, wipe with damp cloth.



Wheel Carry Bag 2019012215
included with Kits only.

MAKE SURE TO TAKE SPECIAL CARE TO NOT DRAG THE FRAME WHEN SETTING UP OR TAKING DOWN.